



Secure Series


Secure series should be used only when window casings are not wide enough (less than 4-1/2" or 114 mm)

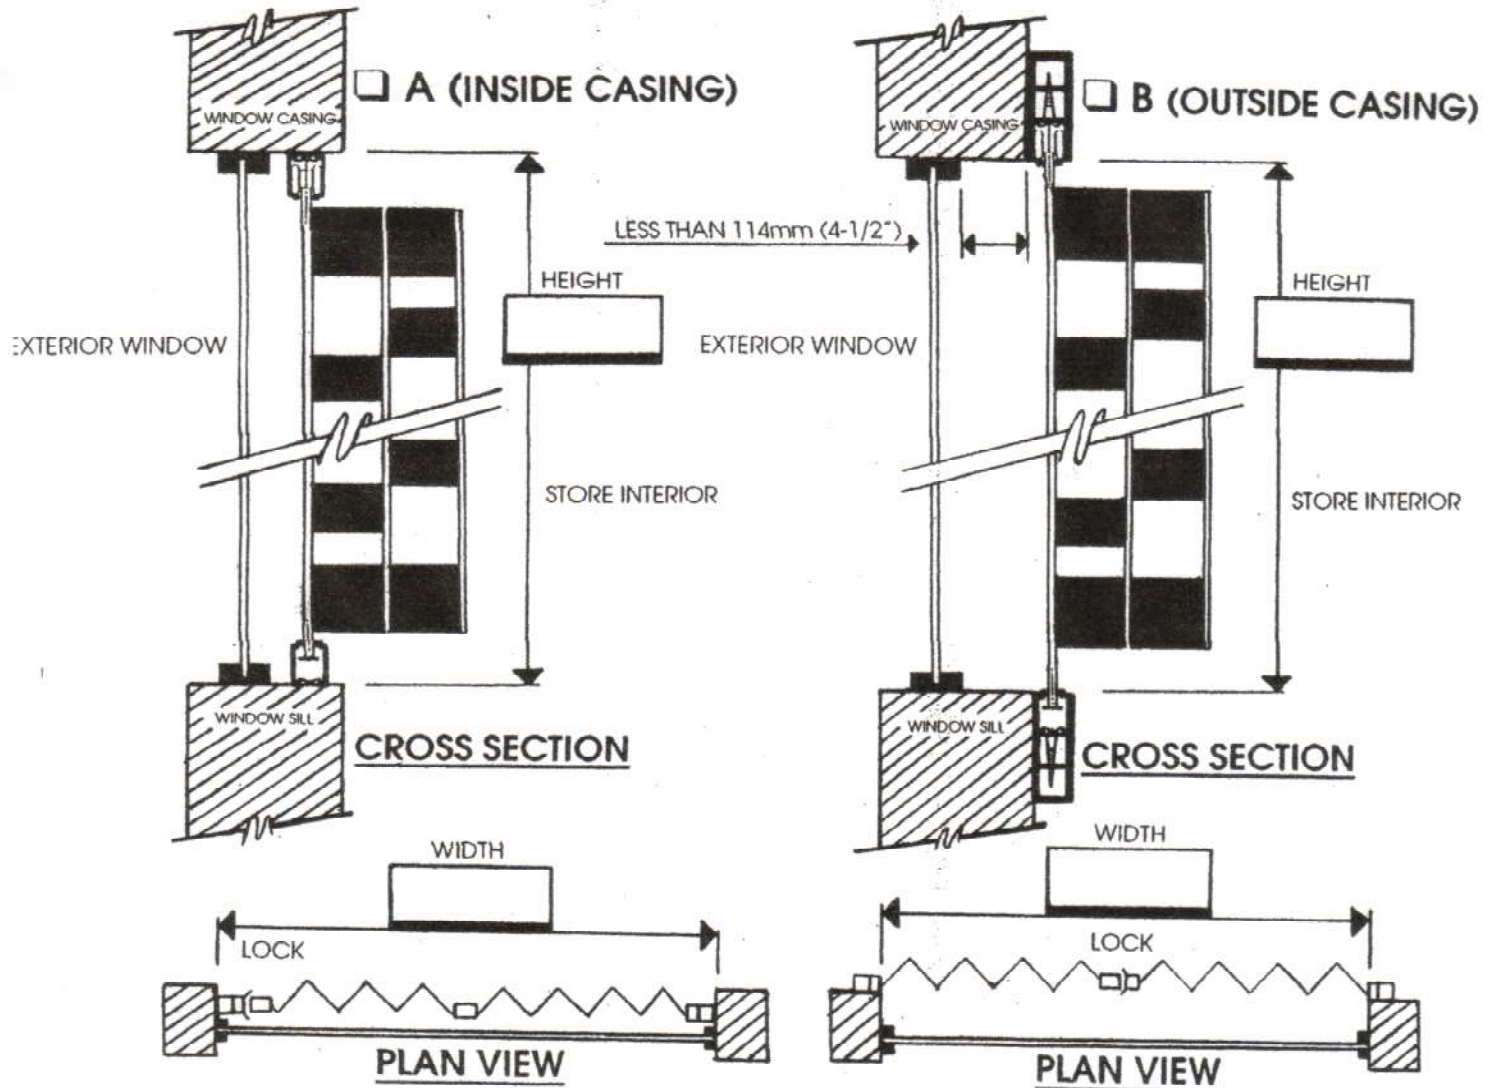


Secure series are available in these different patterns.

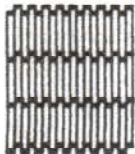


◀ SECURE S-12

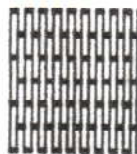

◀ SECURE S-525

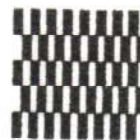

◀ SECURE C-99

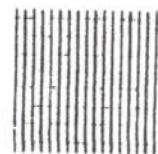

◀ SECURE S-126